




CHIP & PIN

SOLUTIONS

Customer Support TERMINAL BASICS GUIDE

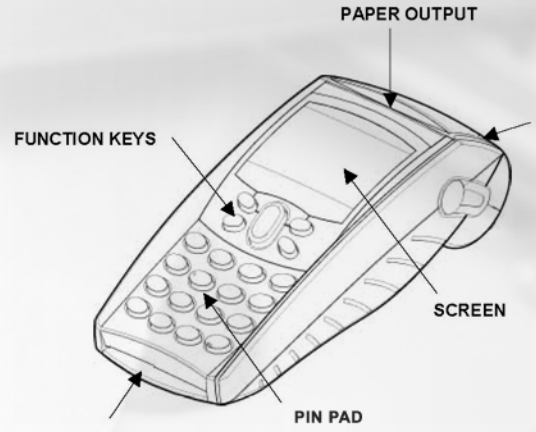

Complete card payment solutions



Chip & PIN Solutions



Contactless Solutions



EPOS Solutions



Merchant Services



E-Commerce Solutions




Turning on the handset

You can turn the handset back on by pressing the bottom left button.



Turning off the handset

You can turn the handset off by pressing and holding the “Yellow” button and ‘ ; ’ ‘.

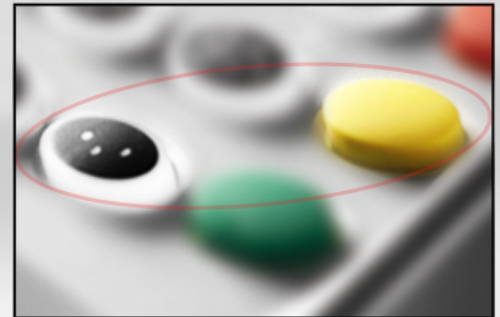

How do I insert a new till roll?

To insert a new till roll please ensure that the paper is fed from underneath the till roll, as shown right.



How do I print a duplicate receipt?

Press the ‘**MENU**’ or ‘**F**’ button 3 times, Then press the ‘**F4**’ button for a duplicate.



CHIP & PIN

SOLUTIONS